




Runner Bean V FRAME

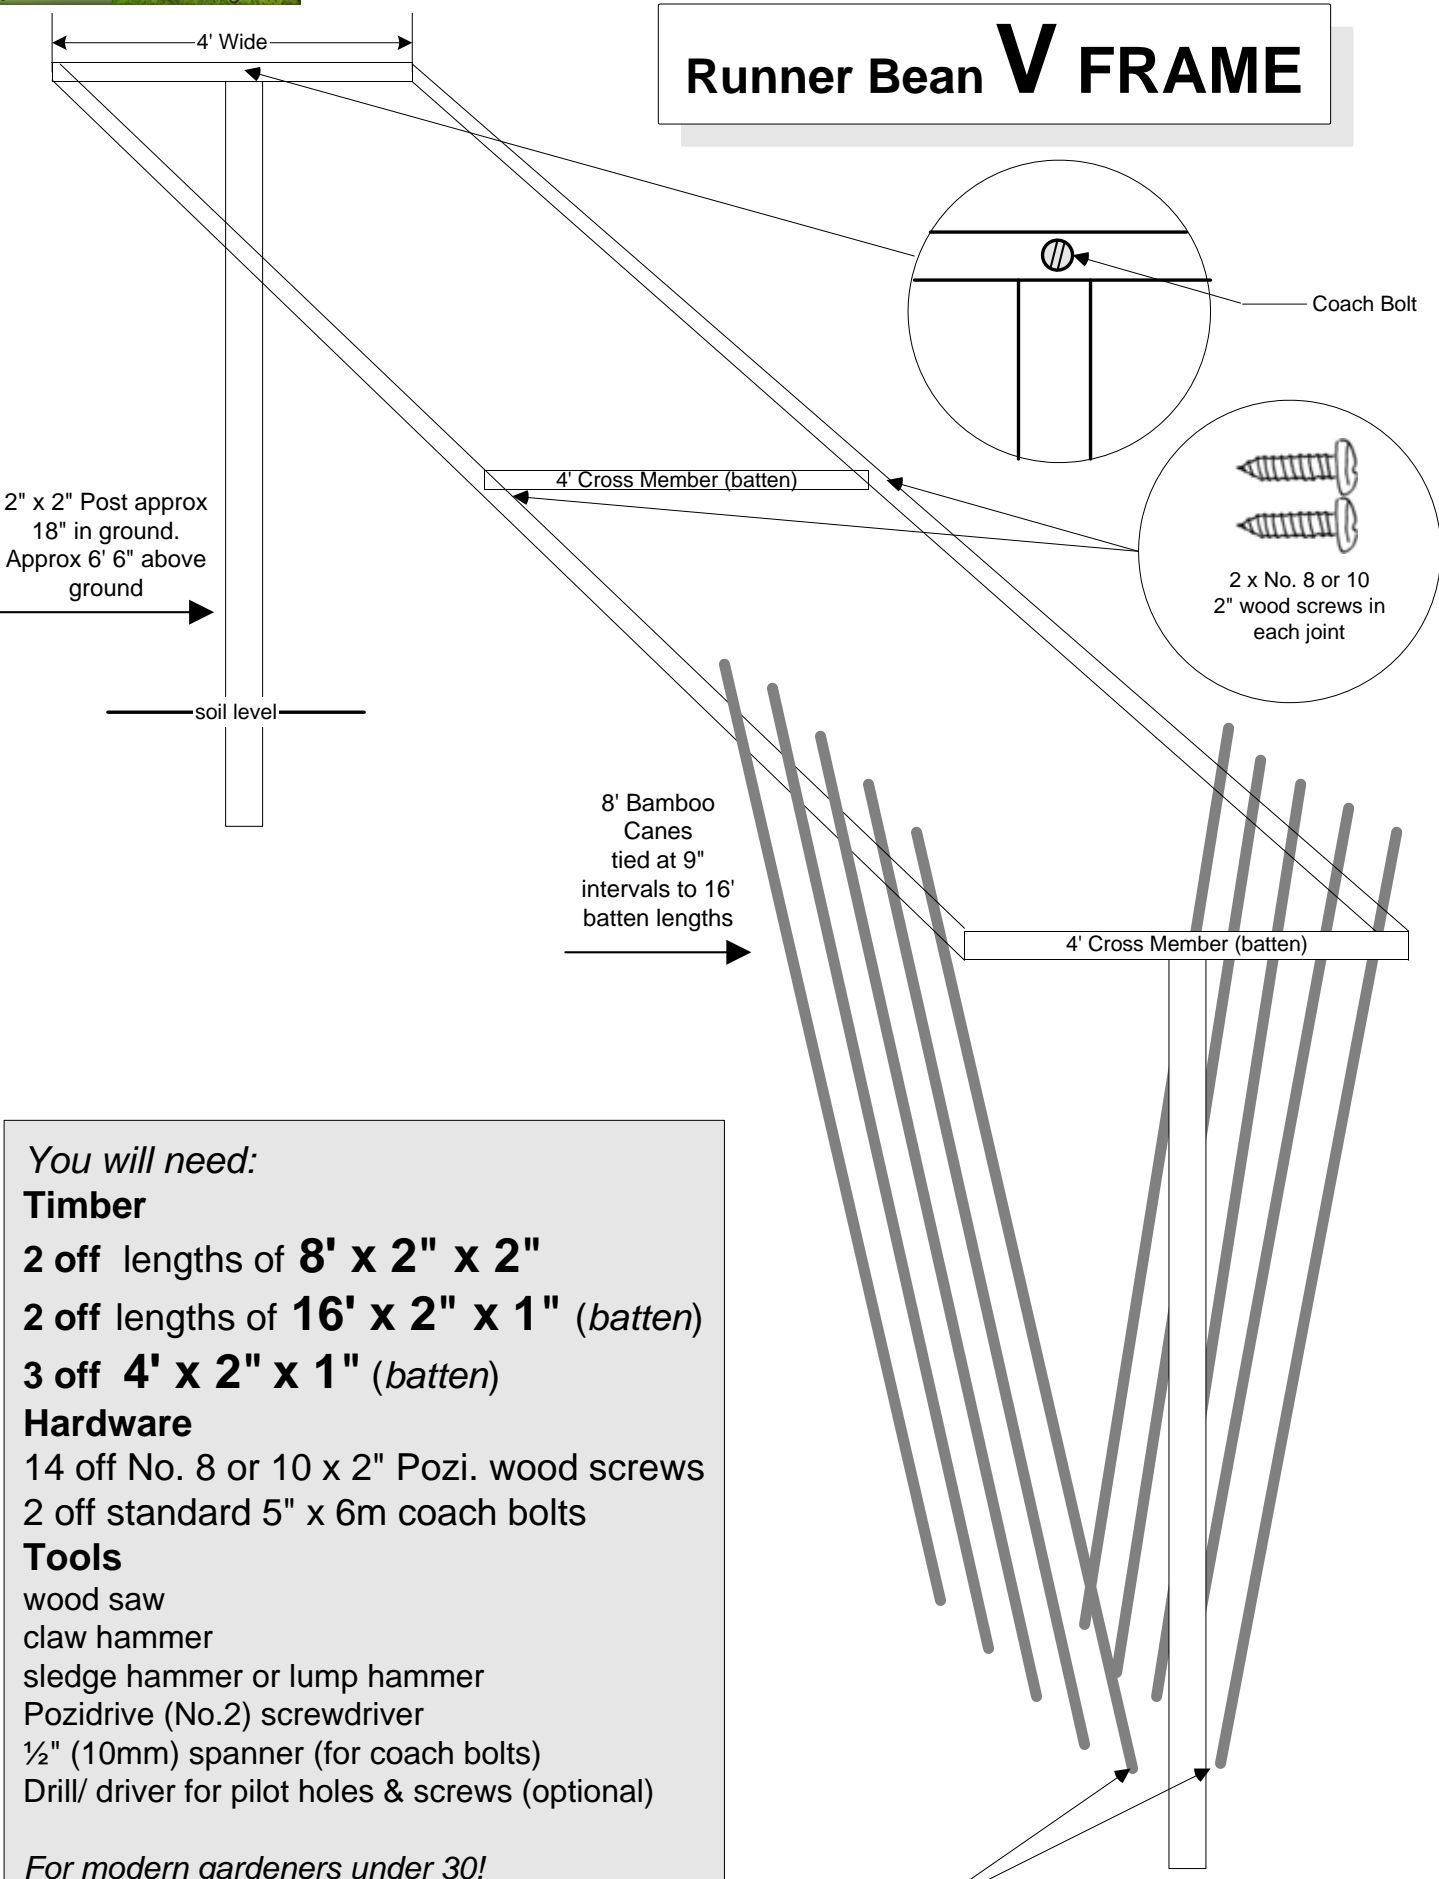

- You will need:*
- Timber**
 2 off lengths of **8' x 2" x 2"**
 2 off lengths of **16' x 2" x 1"** (*batten*)
 3 off **4' x 2" x 1"** (*batten*)
- Hardware**
 14 off No. 8 or 10 x 2" Pozidrive wood screws
 2 off standard 5" x 6mm coach bolts
- Tools**
 wood saw
 claw hammer
 sledge hammer or lump hammer
 Pozidrive (No.2) screwdriver
 ½" (10mm) spanner (for coach bolts)
 Drill/ driver for pilot holes & screws (optional)
- For modern gardeners under 30!*
 1" (inch) = 25mm. 1' (foot) = 300mm

Designed & Drawn by Gwilym 2012