


Runner Bean V FRAME

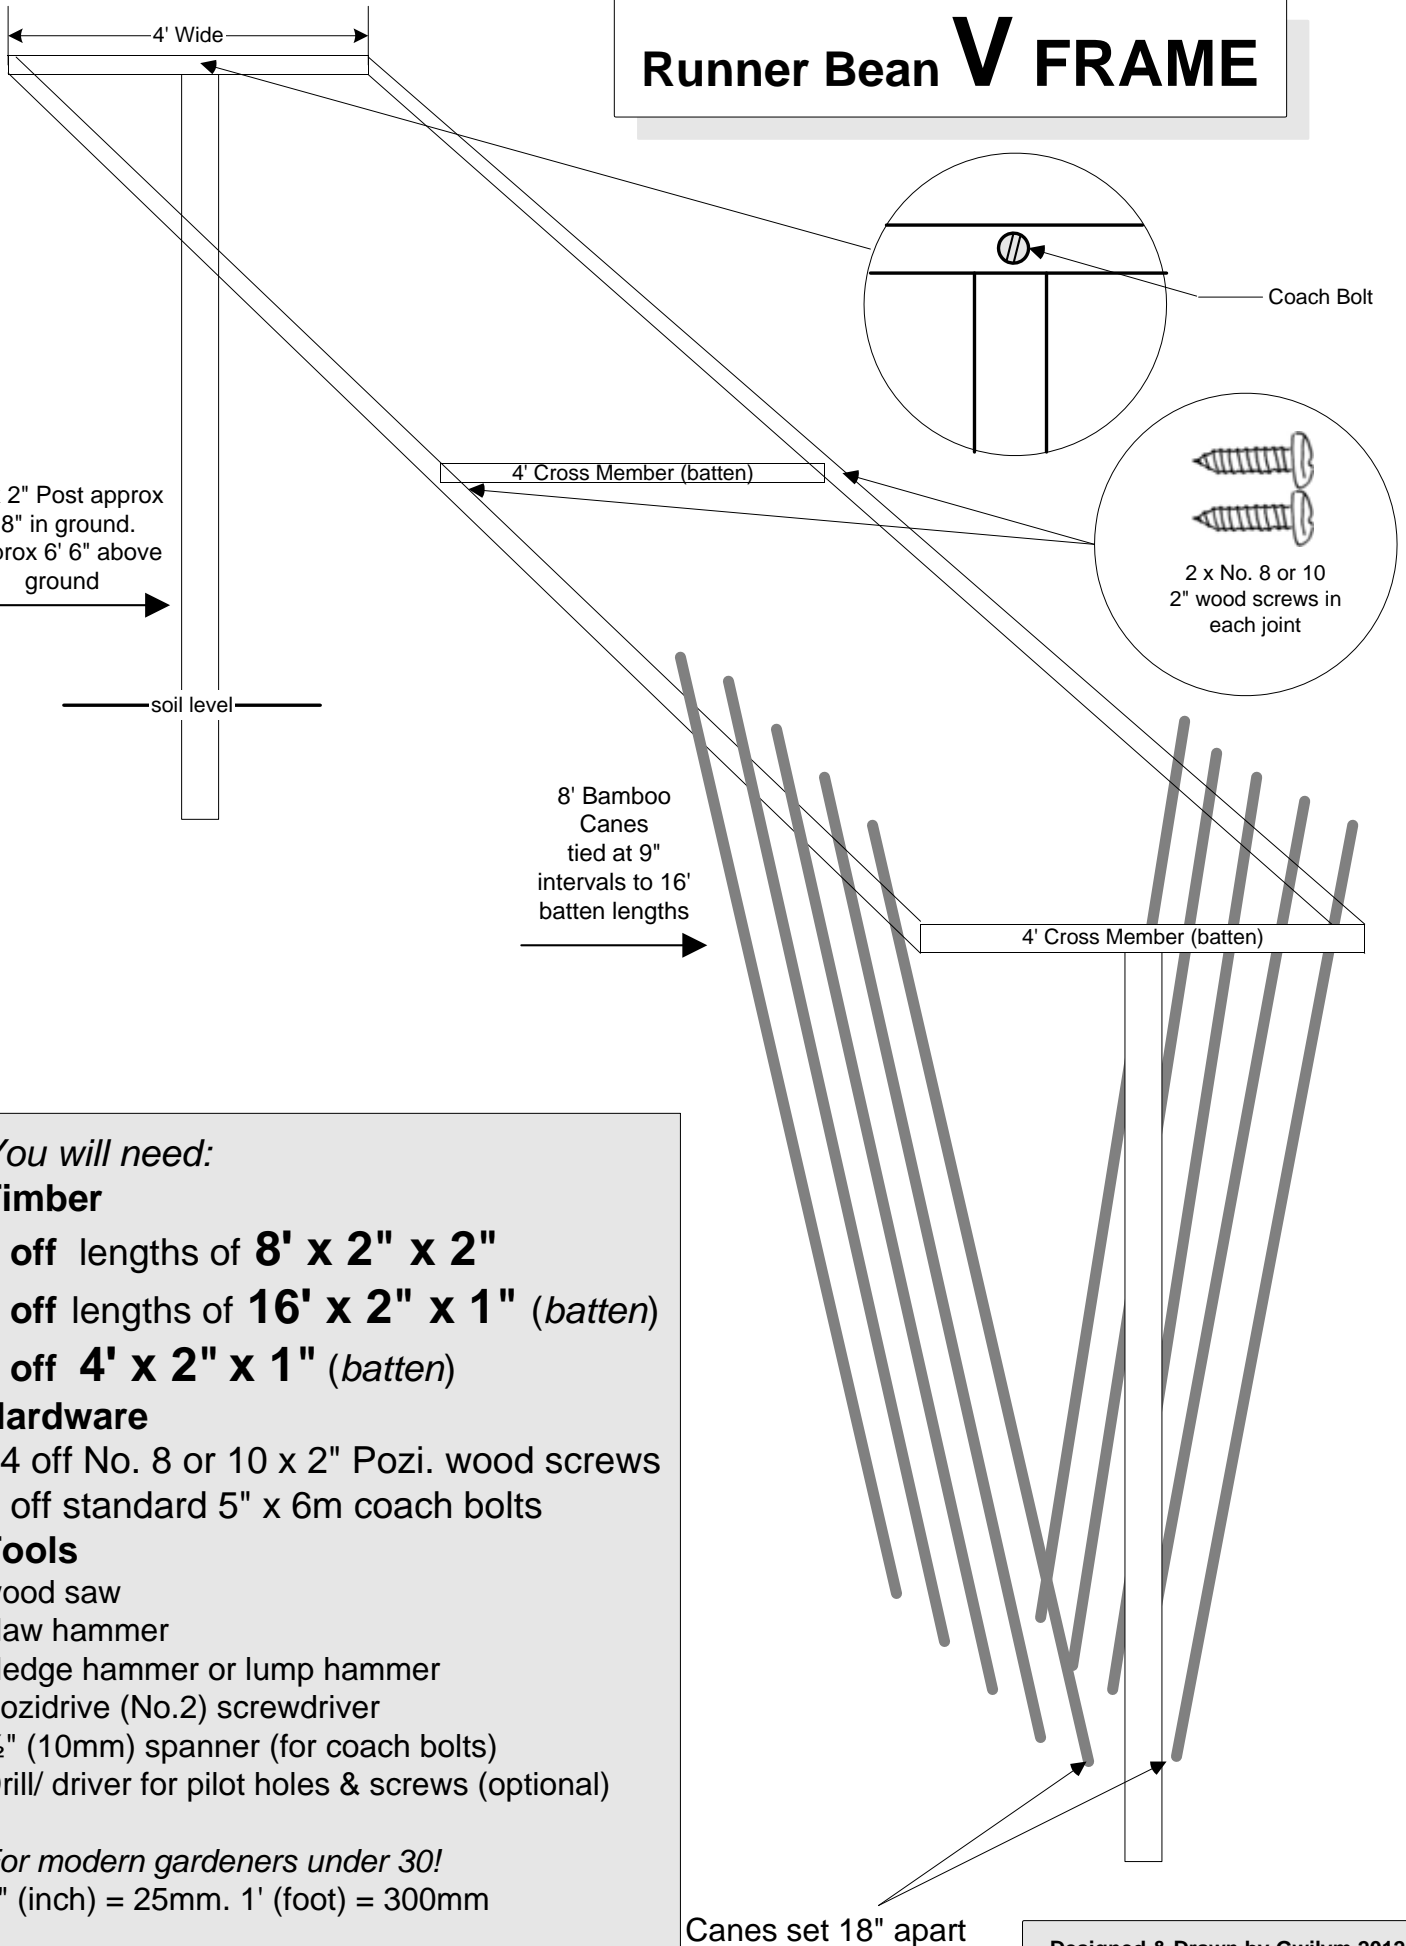

You will need:

Timber

2 off lengths of **8' x 2" x 2"**

2 off lengths of **16' x 2" x 1"** (*batten*)

3 off **4' x 2" x 1"** (*batten*)

Hardware

14 off No. 8 or 10 x 2" Pozidrive wood screws

2 off standard 5" x 6mm coach bolts

Tools

wood saw

claw hammer

sledge hammer or lump hammer

Pozidrive (No.2) screwdriver

½" (10mm) spanner (for coach bolts)

Drill/ driver for pilot holes & screws (optional)

For modern gardeners under 30!

1" (inch) = 25mm. 1' (foot) = 300mm

Canes set 18" apart

Designed & Drawn by Gwilym 2012